


parts detailed in Spares Note No.121.

NOTE: It is most essential that the adjustment is NOT carried out with the engine running.

The bearing surface of the Camshaft and Thrust Peg must be lubricated prior to assembly.

For Spares information please refer to Spares Note No.121.

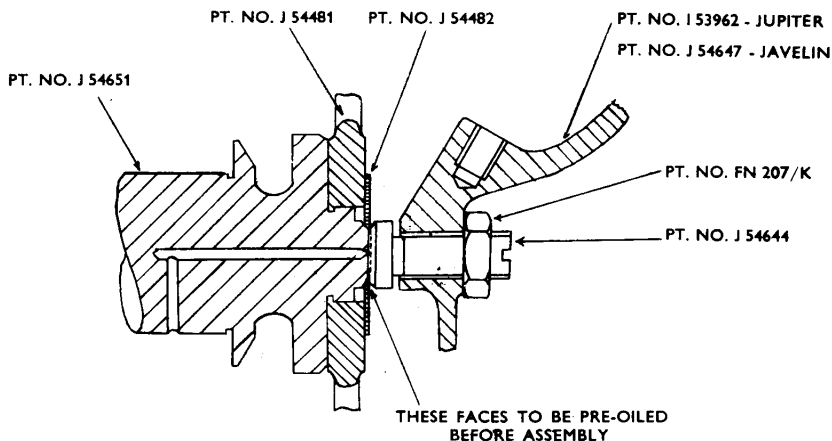

THRUST PEG ASSEMBLY